


THERMAFIBER[®] INSUL-FILL[®] BLOWN-IN ATTIC INSULATION RULER

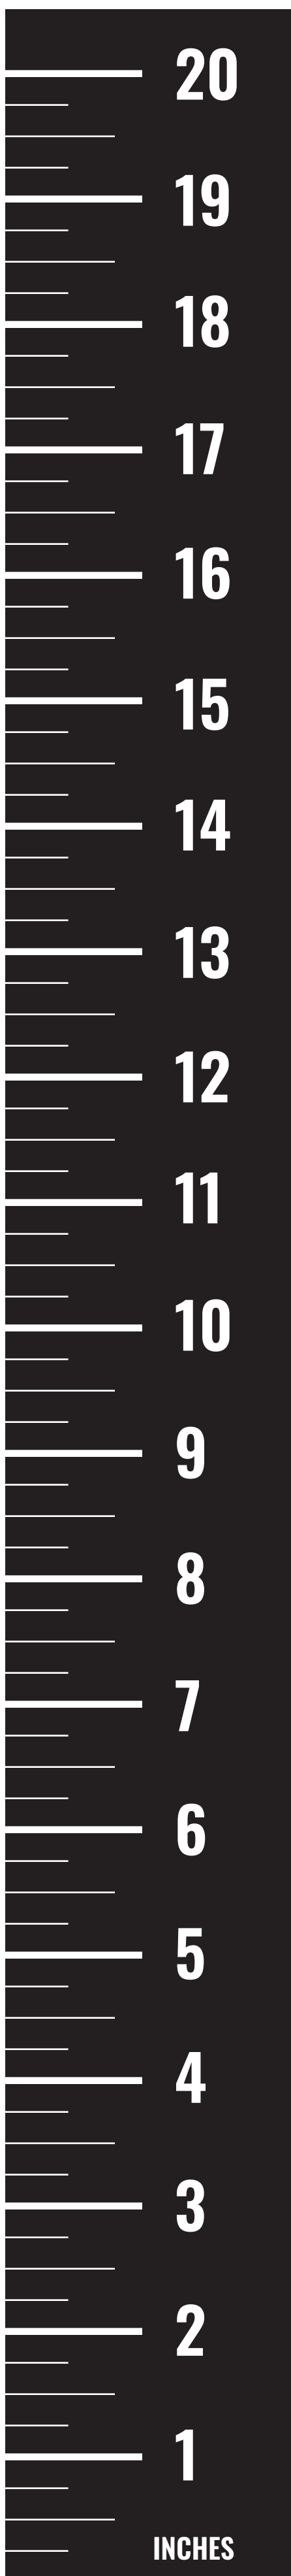

17.6" **R-52**

16.6" **R-49**

14.9" **R-44**

12.8" **R-38**

11.2" **R-33**

10.1" **R-30**

8.5" **R-25**

7.4" **R-22**

6.4" **R-19**

4.4" **R-13**

3.7" **R-11**

How to use INSUL-FILL[®] Rulers:

- Using a staple gun, attach INSUL-FILL[®] rulers vertically on joists, roof trusses, or vertical framing to determine how much Thermafiber[®] INSUL-FILL[®] Blown-In Attic Mineral Wool Insulation you need to add.
- Attach at least one ruler for every 300 square feet of attic space.
- Use a marker to indicate on each of the rulers the desired depth of additional insulation needed.
- Blow in enough insulation so that the depth is level with the marks you added to each ruler.
- Measure the difference. The higher the R-value, the greater the insulating power.
- Staple one copy near attic hatch for future reference.



Thermafiber[®]

THERMAFIBER, INC.
ONE OWENS CORNING PARKWAY
TOLEDO, OHIO 43659
1-888-TFIBER1 [834-2371]
www.thermafiber.com

Pub. No. 10021304-B. Printed in U.S.A. April 2020.
© 2020 Owens Corning. All Rights Reserved.
© 2020 Thermafiber, Inc. All Rights Reserved.